ASSEMBLY INSTRUCTION

E468 ESPRESSO LEGS LOVESEAT

A Chair Back	**B** Seat	**C** Left Front Leg	**D** Right Front Leg	**E** Lock Washer
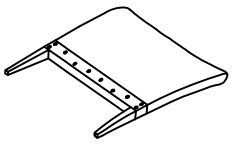				
1pc	1pc	1pc	1pc	12pcs
F Flat Washer	**G** Bolt 5/16"x4"	**H** Bolt 5/16"x2-1/2"	**I** Allen Wrench	
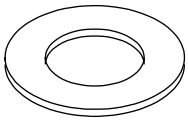				
12pcs	4pcs	8pcs	1pc	

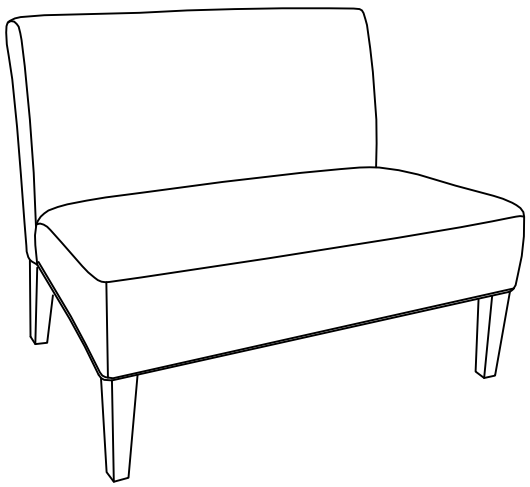

This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

1 Put the seat (B) on a smooth flat surface,Attach one left front leg (C) and one right front leg (D) to the seat (B) use bolt (H),lock washer(E) and flat washer (F) on both hole of the seat (B).Turn the Allen wrench (I) in the Bolt (H);But not too tight.

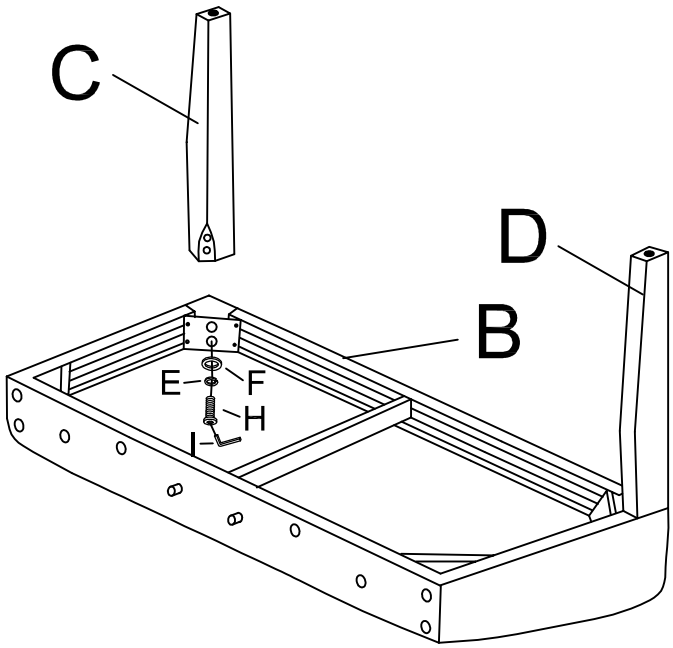

2 Put chair back (A) on a smooth flat surface, Attach the seat (B) with 2 front legs (C) and (D) to the chair back (A). use the bolt (G), lock washer (E) and flat washer (F) in both of holes of the seat (B) and chair back (A); turn the Allen wrench (I) in bolt (G). But not too tight.

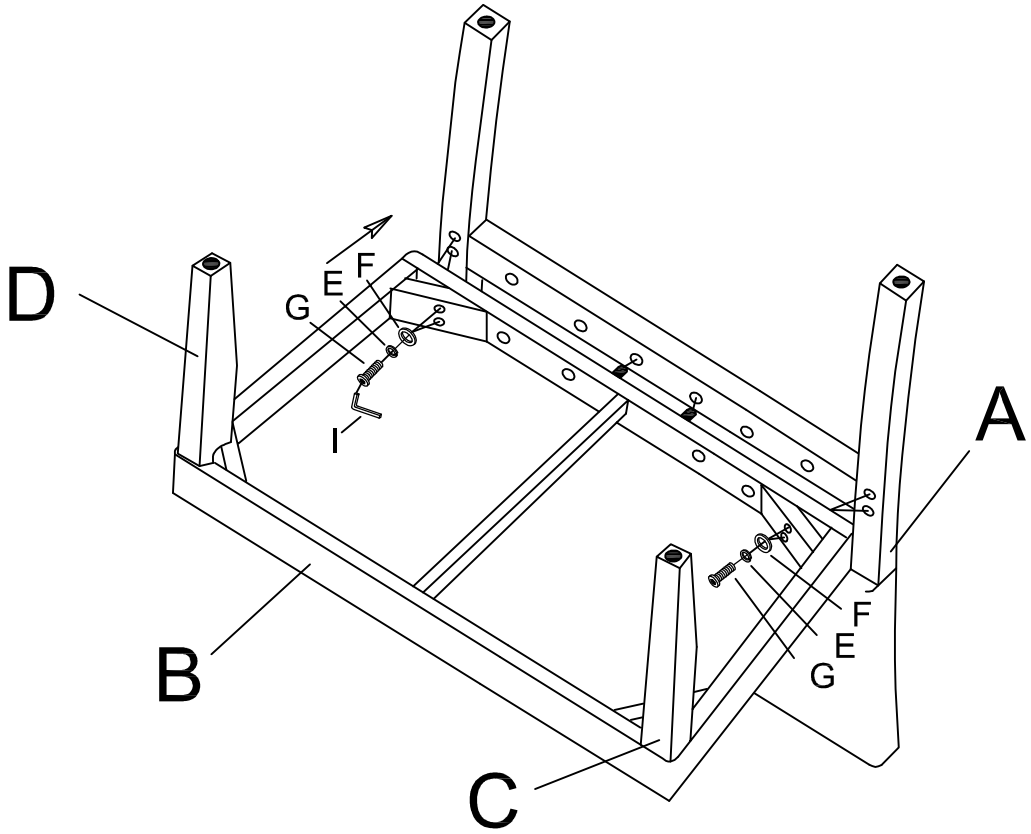

3 Use the bolt (H), lock washer (E) and flat washer (F) in both of the holes of the seat (B) and chair back (A); turn the Allen wrench (I) to tighten the Bolt (H).

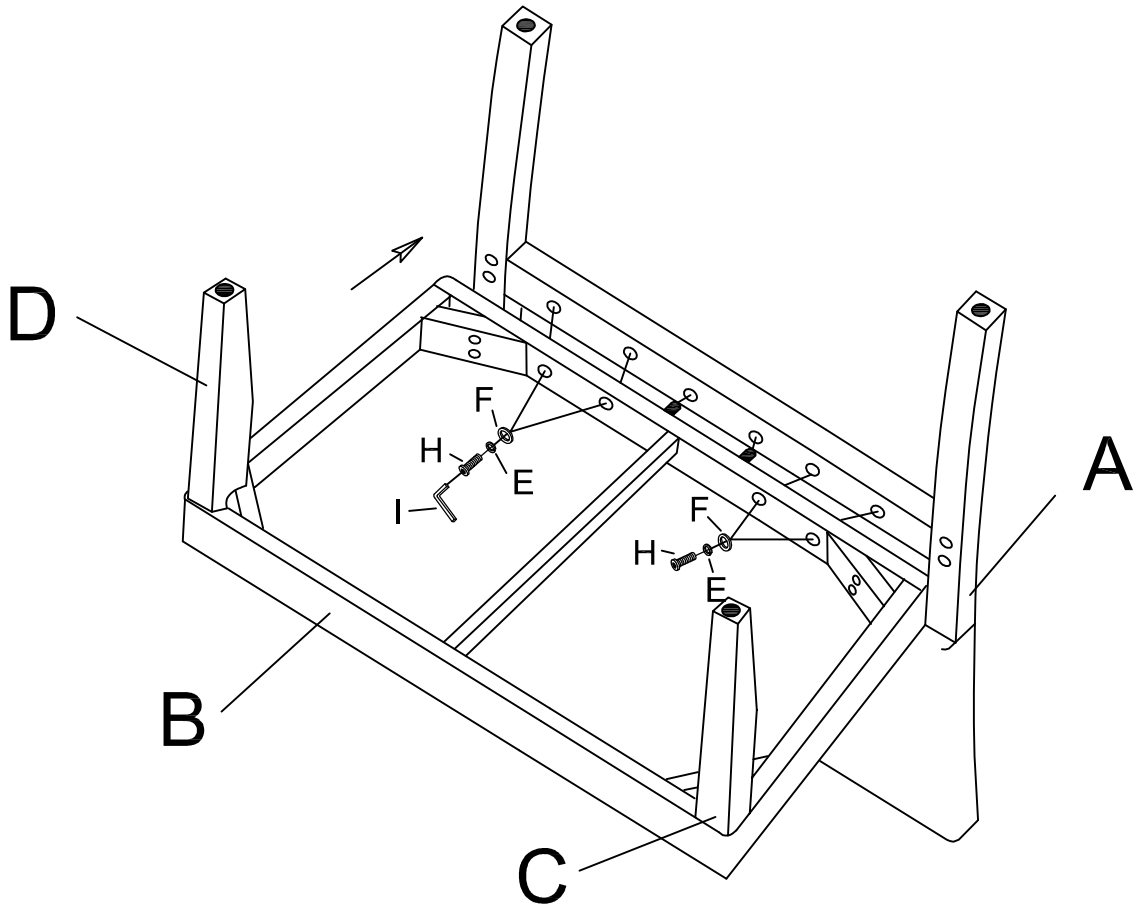

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.